WARNING!

We advise users to store the Epic Eagle HUD in an environment away from direct sunlight when not in use or for extended periods of time. When power is applied to the HUD, a cooling fan is activated. The operation of the fan enables the HUD to operate even in extreme heat from direct sunlight. When not powered, the fan does not run and it should be treated with the same care as you would any other consumer electronics device. Post flight, we recommend operators should take it off the glareshield and place back into the storage bag. We strongly recommend

not leaving in a hot aircraft cabin for extended periods of time.

Note: Requires specific 12V-only power supply! (Rated: 12V=1.6A)




Epic Eagle 1Quick Start Guide

For iOS Devices to Nav/GPS/ADS-B Device

Class B Digital Device Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designated to provide reasonable protection against harmful interference in a residential installation. This equipment generates, used and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment on and off, the user is encouraged to try to correct the interference by one or more of the following measures: reorient or relocate the receiving antenna; increase the separation from that to which the receiver is connected; consult the dealer or an experienced radio/TV technician for help.

Note: This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any intereference received, including interference that may cause undesired operation.

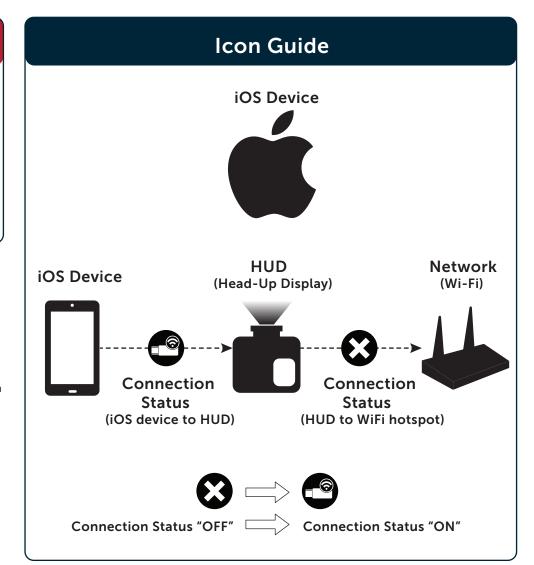

OPERATING INSTRUCTIONS



1. Power on your Nav/GPS/ADS-B device.








Stratus ADS-B Receiver

Step 2


2. Power on HUD

Press HUD "POWER" Button

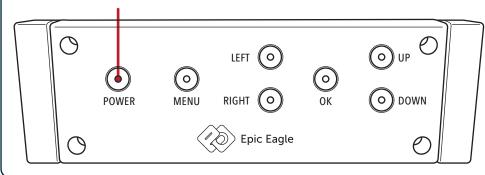

Step 3

3. System is initialized when you see below:

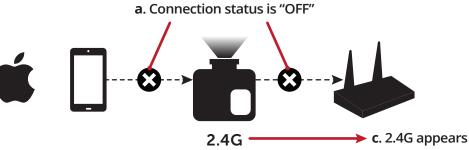


→ **b**. Yellow bar appears from left to right

Step 4

4. If necessary, switch from 5G to 2.4G with a short press of the "OK"

short press of the "OK" button* *This step is crucial

because Nav/GPS/ADS-B devices operate at 2.4G, which is the default.

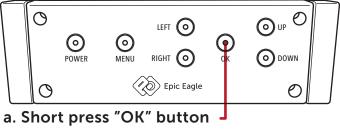

2,4G

b. 2.4G will appear

Step 5


5. Tap on "Settings" on your iOS device.



Step 6


6. Tap "WiFi" and choose the Epic device in the "WiFi" network.



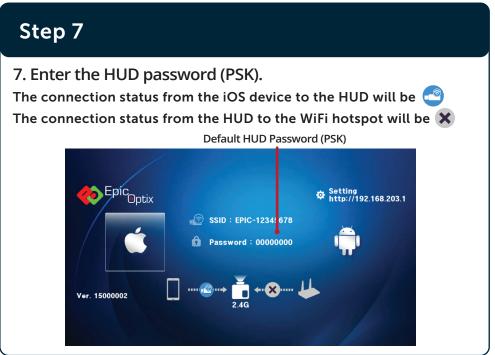





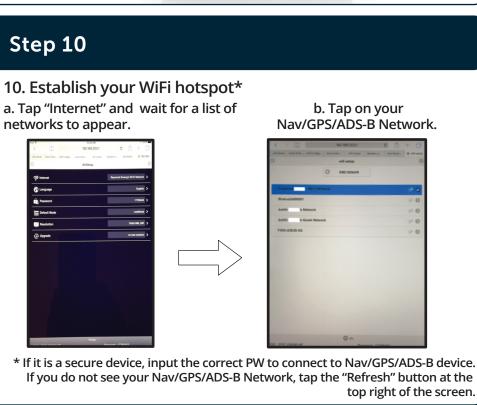

11940 0

